

# Changer la vitesse des interfaces

```
R1(config)#interface <nom de l'interface>
```

```
R1(config-if)#speed <valeur en mb/s>
```

---

Revision #1

Created 31 October 2019 13:32:49 by Cécile

Updated 31 October 2019 13:33:09 by Cécile